

## e63/64 6-series Installation Instructions

Tools required – Pliers(almost any size) & a Flashlight

Step One: Open hood, look down at the headlight. You will see the black plastic Angel Eye reflector unit that you will be replacing with the Angel iBright, it is near the bottom of the headlight, under the high beam cover. Access is much easier if you snap off the small square cover over the high beams (it snaps right back on). Now using the two black tabs on the OEM Angel Eye reflector, simply twist it out. When pulling it out, make note of where the 3 notches on the face of the reflector are, as it will make insertion of the new iBright unit easier.

Step Two: Unplug the OEM wiring plug from the back of the OEM Angel Eye reflector unit.


Step Three: Insert the Angel iBright unit. CustomAngelEyes kept the same OEM seal to ensure the fitment back into the housing. The trick is there are 3 notches on the light housing, 2 are angled and one is not. The odd notch goes towards the top when inserted back into the Headlight and you are re-centering back into the Angel Eye light source hole. Make sure it is inserted properly and securely, you may need to apply some pressure to compress the unit while twisting (it is designed to sit perfectly flush against the fiber-optic cable). You can either plug in the new wiring harness before or after the re-insertion of the new Light.

Step Four: We have included these connectors, which will not damage your OEM wiring at all, and are easy to install.

\* If you received **blue connectors instead of red**, simply follow these directions but instead of placing the red or black wire from the ballast into the connector, you simply press the connectors onto the grey and brown wires in the vehicle and then plug the red wire coming from the ballast into the grey vehicle wire, and black to brown.


Folow pictures 1 through 4 for installation. You should not have any problems.

1)

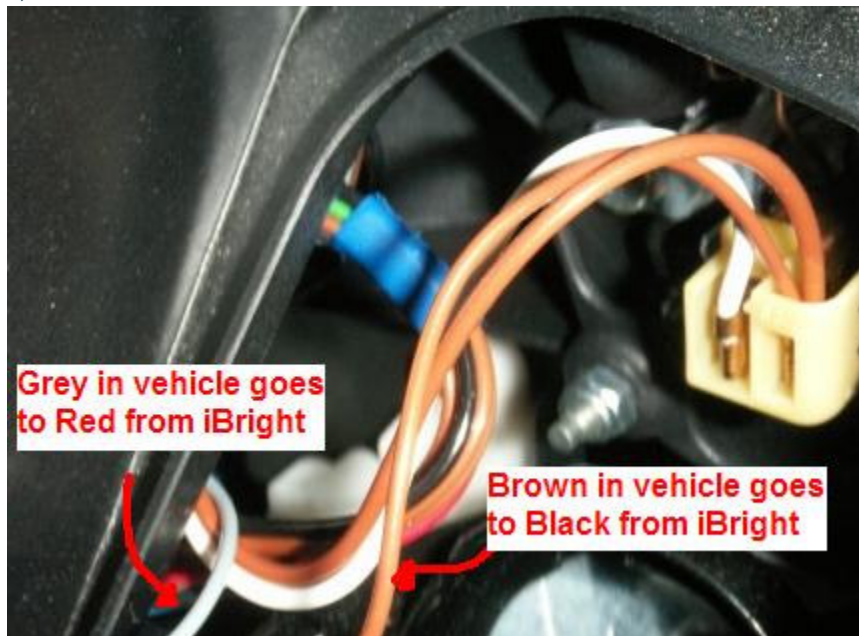


2)

**Take (1) red connector, feed brown wire through first channel (do the same for the grey wire after).**

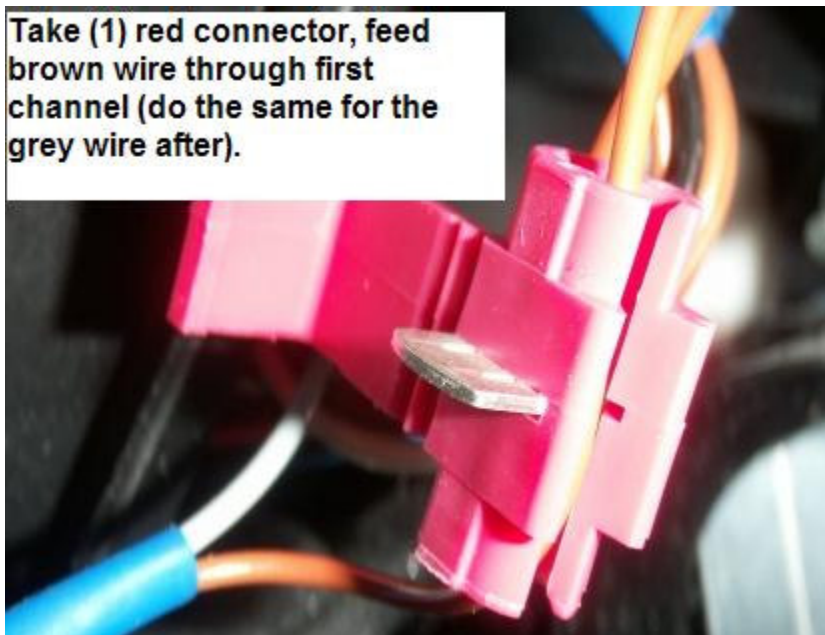


3)

**Take Black wire coming out of the iBright, push wire into the second channel of the connector until it HITS THE BOTTOM**

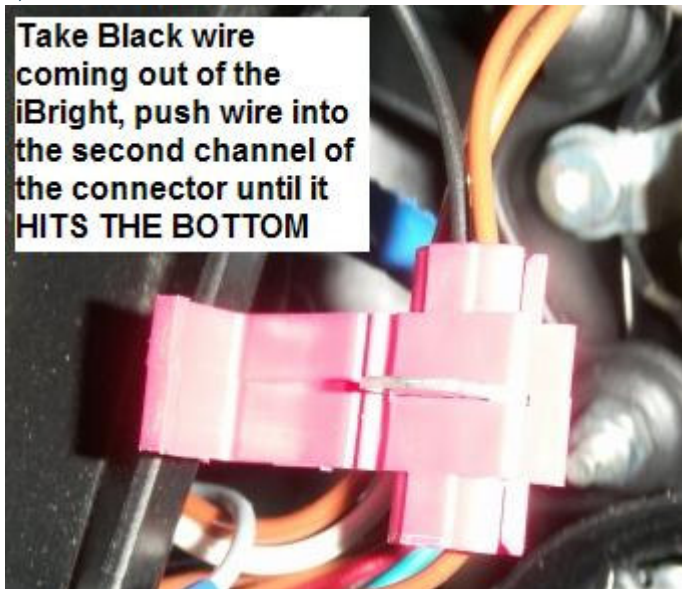

4)

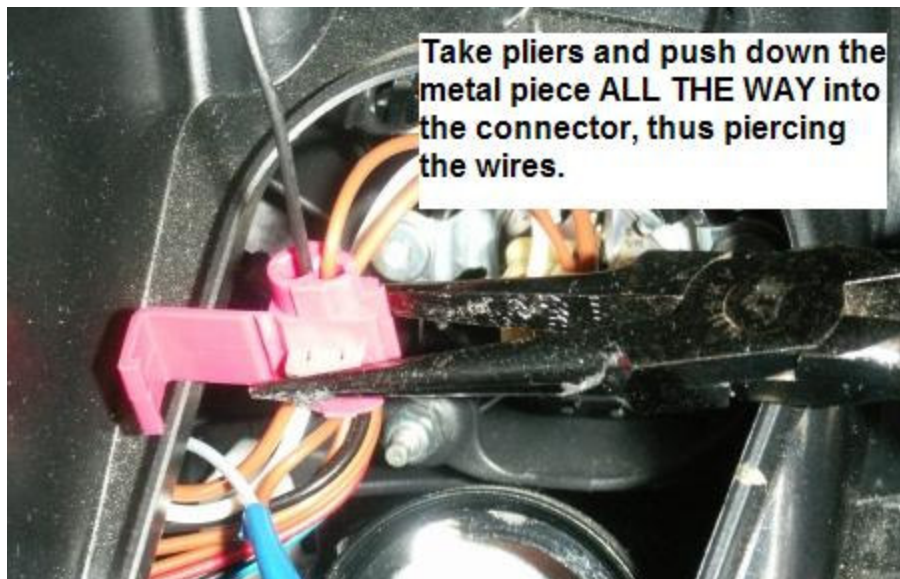

5)



Step Five: Enjoy, and send us/post plenty of pictures!

[www.AngeliBright.com](http://www.AngeliBright.com)

[www.AngeliBright.com](http://www.AngeliBright.com) © 2006

AIM:  MAIL: 

Privacy Pol

.....